


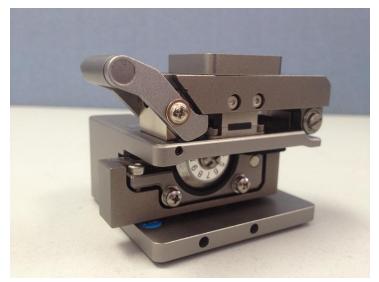

910CL Optical Fiber Cleaver


- Capable of cleaving single mode and multimode fibers.
- Same adapters as the 910FS.
- Shipped in soft carry case with adjustment tools/instructions.
- Cleaving wheel is specified for 12,000 cleaves.
- Cleaving wheel is user serviceable/replaceable






Operation

- 1. Strip and clean buffer from fiber.
- 2. Insert fiber into the appropriate fiber adapter (250, 900).
- 3. Open cleaver clamp.
- 4. Move cleaving wheel to the position closest to you.
- 5. Insert fiber adapter into the _ cleaver.

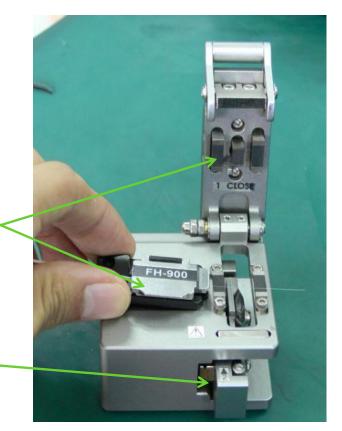



- 6. Close the cleaver clamp.
- Slide the cleaving wheel mechanism away from you.

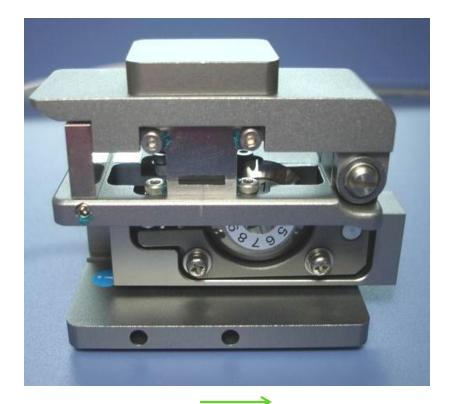



- 8. Open the cleaver clamp mechanism.
- 9. Discard the cut fiber end in an appropriate storage device.
- 10. Remove the fiber adapter from the cleaver with the cleaved fiber do not let the cleaved fiber end touch anything.

Contact Greenlee sales or your representative for pricing.



Sales and Technical Support

Messkom Vertriebs GmbH Awarenring 38 D-85419 Mauern

Tel: 0049 (0)8764 / 948 430 Fax: 0049 (0)8764 / 948 433

Email: info@messkom.de



www.messkom.de



